


INSERTION SCHEME ELISIR

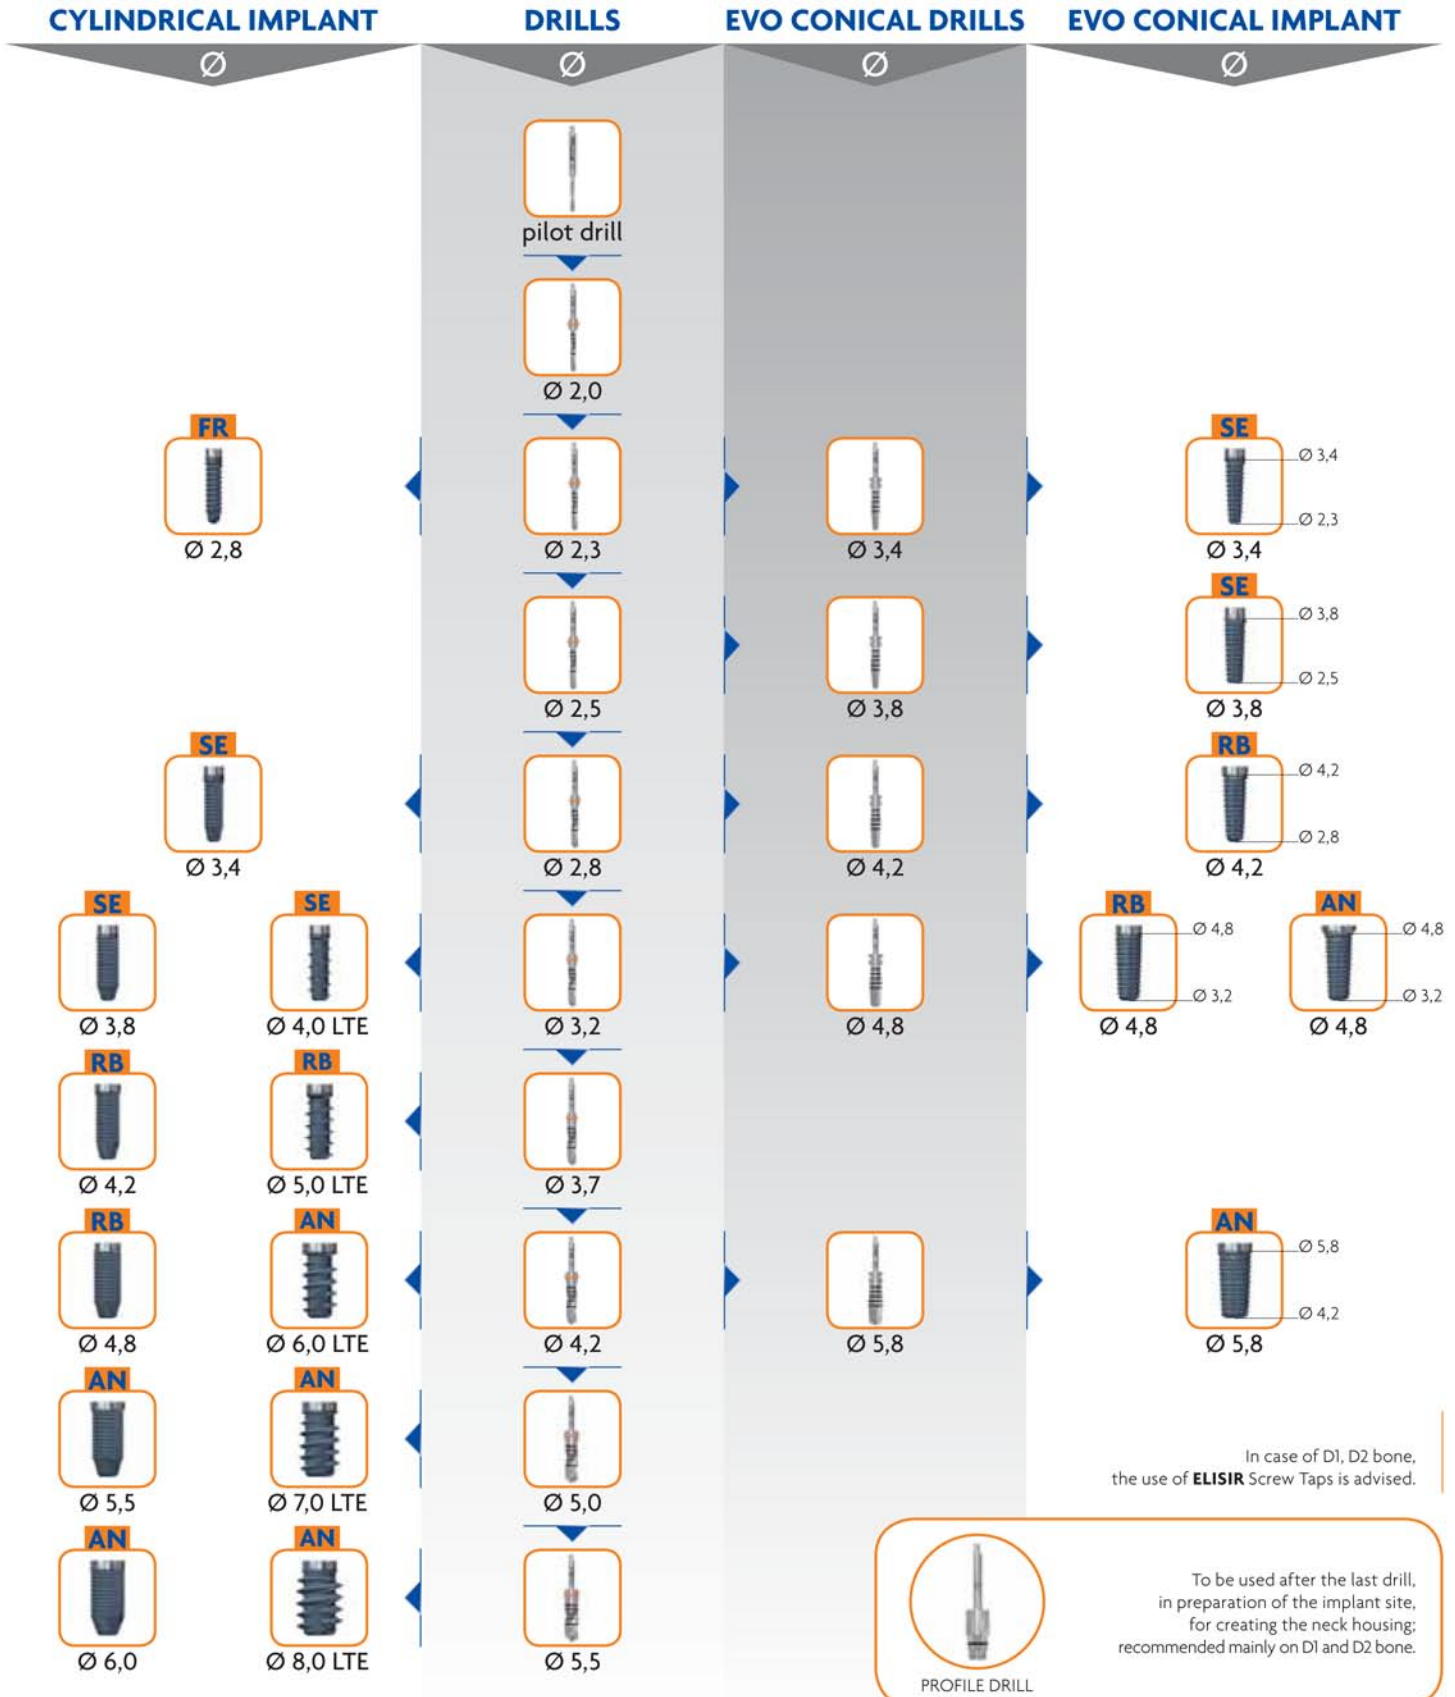

In case of D1, D2 bone, the use of **ELISIR** Screw Taps is advised.



PROFILE DRILL

To be used after the last drill, in preparation of the implant site, for creating the neck housing; recommended mainly on D1 and D2 bone.