INSERTION SCHEME
STORM

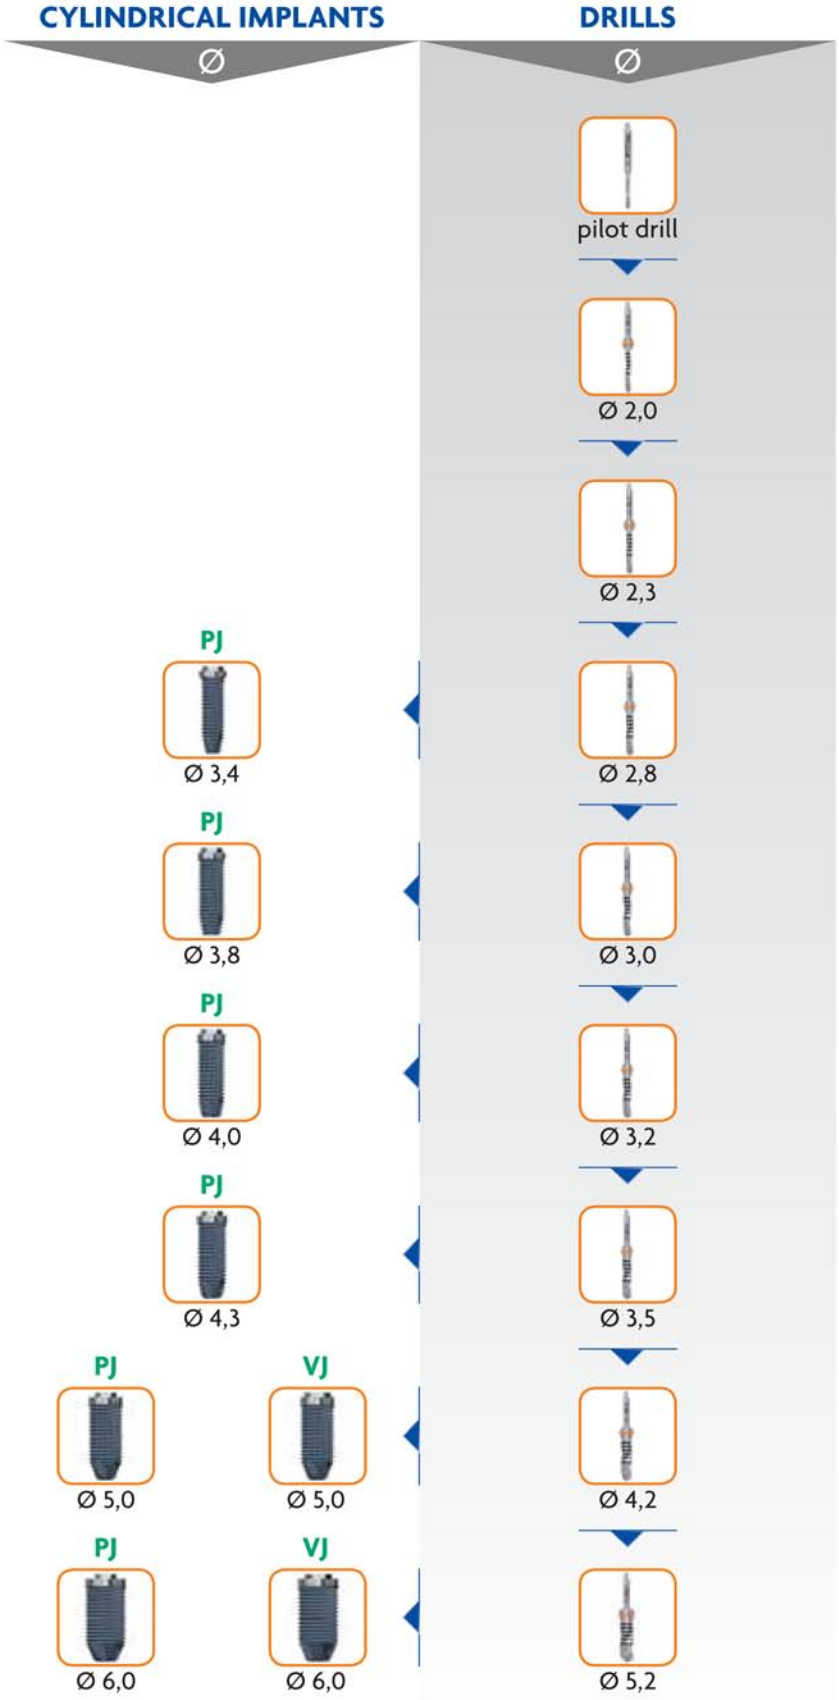

In case of D1, D2 bone, the use of **STORM** Screw Taps is advised.